


Layout

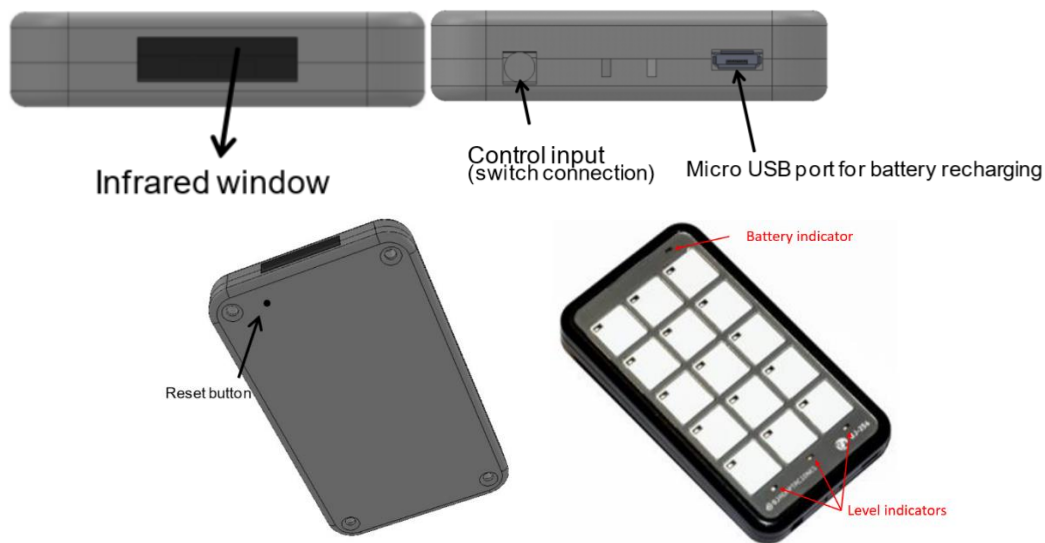

Configuration Mode

To enter configuration mode Press buttons 4 & 6 together

Button	Function	Description
1	Scan Time	Time between moving from one cell to the next 0.1 to 9.9 [x],[.],[y]
2	Scan Mode	000 = linear, 001 = column row
3	Extra Time	Scan delay on first cell 0.1 to 9.9 [x],[.],[y]
4	Scan Buttons	Number of buttons to be scanned 1 to 15 [001] – [015]
5	Number of Levels	Number of levels available 1 to 8 [001] – [008]
6	Press time	Button press time before activation 0.1 to 9.9 [x],[.],[y]
.	Reset	Enter 000 to restore factory defaults
ESC	Escape	Exit

Level indicator

Level	Indicator		
1			
2			
3			
4			
5			
6			
7			
8			


Programming keys

- 1) Select the level of the key you wish to program onto
- 2) To enter programming mode Press 1 & 3 together. Battery indicator will go red to indicate when programming mode is enabled.
- 3) Press the required button you wish to program.
- 4) Select the required programming function mode you require.

Mode	Function
000	Simple Infrared learn
400	Repeat transmission infrared whilst key is pressed
500	On/Off infrared codes i.e TV on & TV off
255	Reset key
700	Infrared macro
300	Change level
600	Radio transmission (BJ Live products only)

Learn Infrared

Repeat steps 1-4 above, with remote pointing at the infrared window press the required key on the remote control.

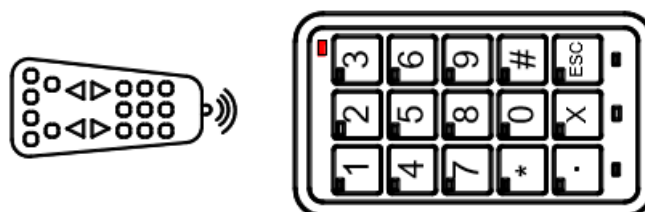

When infrared is learnt the battery indicator will go green.

For recoding on/off codes repeat steps 1-4.

- 1) Press '000' and record the 1st infrared code
- 2) Press '500' and record the 2nd infrared code

For recording macros repeat steps 1-4 selecting code 700, up to a maximum of 7 infrared codes

- 1) '000' and record 1st infrared code
- 2) Press '000' and recode 2nd infrared code
- 3) Repeat until you have recoded all the macro, when completed press '700'

Notes

ESC key – this is default change level key