


Layout

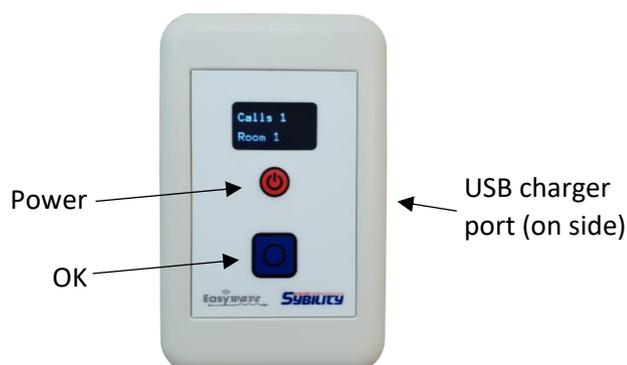

Receiving calls

When Call Easy receives a stored signal, it will display the text and start vibrating and beeping three times. This will be repeated at a 10second interval twice more if the call is not acknowledged.

The first line shows “Calls” and the number of overall received calls.

Using the blue ‘OK’ button with a brief press to cycle between the received calls. To confirm the Call Press and hold the blue ‘OK’ button on the current displayed call, this will delete that call from the list.

Power

To turn the Call Easy Pager on or off press and hold the power button for 3s, When the pager is off no calls will be received.

Mute

Call Easy Pager can be set to a “Mute” where no signal is received anymore. To do this please press the blue “OK” button for 10seconds until “Mute” is displayed. Do the same again to cycle back to normal use mode. NOTE: The Mute function is only available when all received calls are confirmed and the display is dark!

Battery & Charging

Battery - You can check the current battery percentage status by pressing the blue ‘OK’ button briefly after all received calls are confirmed (display dark). While charging you can additionally see the indication if the blue button is pressed briefly.

Low battery warning is indicated with “Bat.” in the display and a repeating tone.

Please **ONLY** use the supplied charger & USB lead – please take care when connecting & disconnecting the charge lead and don’t force the connection.

The full charging time of the battery can vary between 4 or 5 hours.

If the device has been allowed to go completely flat, you might need to charge the device for 30 minutes before it can be used fully again.

The battery should only be changed by an authorised service agent.